


# TSJ100A Aluminum Tool Solutions Jib

## Installation, Operation & Maintenance Manual

Wall  
Mounted  
TSJ100A



Free  
Standing  
TSJ100A

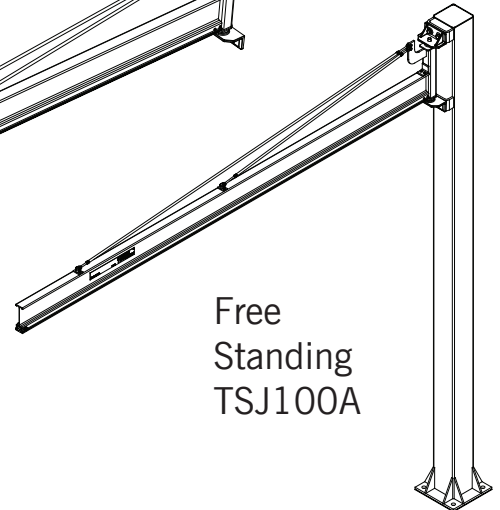

Part Number: MAN-US030-R00 Released 12/2025  
Find manual updates at:  
<https://www.gorbel.com/service-support/archived-installation-manuals>



Scan to Register  
Your Warranty

Gorbel Customer Order No. / Serial No.

Gorbel Dealer

# TABLE OF CONTENTS

Introduction..... 1

Installation

    Step 1 - Pre-assembly .....2-3

    Step 2 - Boom Assembly .....3

    Step 3 - TSJ100A Boom Installation (Wall/Column Mounted).....4

    Step 4 - TSJ100A Free Standing Mast Installation .....5-6

    Step 5 - TSJ100A Boom Installation (Free Standing) .....7

    Step 6 - Final Steps .....7

Crane Operator Instructions..... 8

Limited Warranty..... 9

Inspection and Maintenance Schedule ..... 10

Questions? Concerns? Comments? Please call (800) 821-0086 (US and Canada) or (585) 924-6262 (outside US).

Visit us at [www.gorbel.com](http://www.gorbel.com).

# INTRODUCTION

Thank you for choosing a Gorbel® Tool Solutions Jib to solve your material handling needs. The innovative design and heavy duty construction of a Gorbel® Tool Solutions Jib will provide a superior quality product that will offer years of long term value. A Gorbel® Tool Solutions Jib will provide many years of dependable service by following the installation and maintenance procedures described herein.

***Dimensions contained in this installation manual are for reference only and may differ for your particular application. Please refer to the enclosed General Arrangement Drawing for actual dimensions.***

**Normal safety precautions:** These include, but are not limited to:

- Checking for obstructions in jib rotation
- Checking that all bolts are tight and have lock washers
- Making sure that festooning cannot be snagged or pinched

For additional safety precautions see page 11.

## WARNING

Only qualified personnel familiar with standard fabrication practices should be employed to assemble these cranes because of the necessity of properly interpreting these instructions. Gorbel is not responsible for the quality of workmanship employed in the installation of a crane according to these instructions. Contact Gorbel, Inc., at 600 Fishers Run, P.O. Box 593, Fishers, New York 14453-0593, 1-800-821-0086, for additional information if necessary.

## WARNING

Equipment described herein is not designed for, and should not be used for lifting, supporting or transporting humans. Failure to comply with any one of the limitations noted herein can result in serious bodily injury and/or property damage. Check Federal, State and Local regulations for any additional requirements.

## WARNING

Consult a qualified structural engineer to determine if your support structure is adequate to support the loads generated by thrust and pull (wall/column mounted), or anchor bolt force, overturning moment, or axial load (free standing) of your crane.

## WARNING

Crane cannot be utilized as a ground: A separate ground wire is required. For example, systems with 3 phase power require 3 conductors plus one ground wire.

## WARNING

Reference American Institute of Steel Construction (AISC) Manual of Steel Construction, Specifications and Codes, Specification for Structural Joints using ASTM A325 or A490 Bolts for proper procedures to follow when using any torque tightening method.

## WARNING

Do not field modify crane in any way. Any modifications without the written consent of Gorbel, Inc., will void warranty.

## WARNING

Storing and/or using your Gorbel equipment outside, when it is not specifically designed for such, may void all or part of the product warranty. Always store/use product(s) as designed.

# INSTALLATION


## STEP 1 - PRE-ASSEMBLY

- 1.1 Packing list can be found in plastic pocket inside hardware box: General Arrangement Drawing can be found inserted in this installation manual.
- 1.2 Read entire manual **before** installing the Tool Solutions Jib.
- 1.3 Check packing list to ensure no parts have been lost prior to initiating assembly of jib.
- 1.4 Tools and materials (by others) typically needed to assemble jib:
  - Torque wrench
  - Hand tools
  - Lifting device to lift heavy masts and booms
  - Leveling tools (plumb bob, level)
  - TSJ-FS anchor bolts (by others, Grade 5 or better), refer to page 4 for specifications
  - TSJ-WM mounting bolts (by others, Ø 5/8" Grade 5 or better)
  - Grout (Non-Shrink Precision Grout)
  - Ladders/man lifts
  - Heavy duty drill
  - Steel shims

### WARNING

Consult a qualified structural engineer to determine that your support structure is adequate to support the loads generated by thrust and pull (wall mounted) or anchor bolt force, overturning moment, or axial load (free standing) of your Tool Solutions Jib.

- 1.5 Identify crane type:  
**Wall/Column Mounted Tool Solutions Jib (diagram 1A):** Refer to **Chart 1A** to determine thrust and pull, then proceed to **Step 3**, page 6.

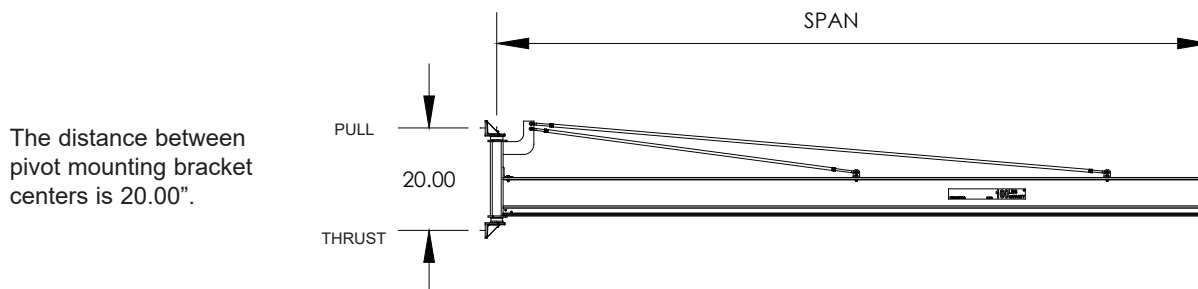

**Diagram 1A.** Wall/Column Mounted Tool Solutions Jib.

Live Load (lbs.)	Span (ft.)	Model Number	Thrust & Pull/2 Bolts (lbs)
100#	4	TSJ100A-WM-4	348
	6	TSJ100A-WM-6	530
	8	TSJ100A-WM-8	718
	10	TSJ100A-WM-10	912
	12	TSJ100A-WM-12	1112


**Chart 1A.** Chart for determining thrust and pull of Wall Mounted Tool Solutions Jib.

**Note:** Loads are based on a 40% impact factor.

## STEP 1 - PRE-ASSEMBLY (CONTINUED)

### Free Standing Tool Solutions Jib (diagram 1B)

Refer to **Chart 1B** to determine anchor bolt load. Refer to **Diagram 4B** on page 4 to determine footer width and depth, then proceed to **Step 2**.

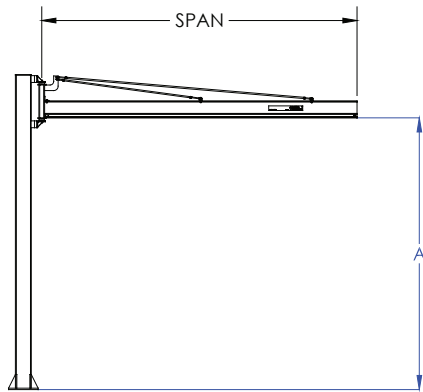

**Diagram 1B.** Free Standing Tool Solutions Jib.


Capacity	A	Span	Model Number	Anchor Bolt Load
100#	8'	4'	TSJ100A-FS-8-4	307#
		6'	TSJ100A-FS-8-6	489#
		8'	TSJ100A-FS-8-8	677#
		10'	TSJ100A-FS-8-10	871#
		12'	TSJ100A-FS-8-12	1071#
	10'	4'	TSJ100A-FS-10-4	298#
		6'	TSJ100A-FS-10-6	480#
		8'	TSJ100A-FS-10-8	669#
		10'	TSJ100A-FS-10-10	863#
		12'	TSJ100A-FS-10-12	1062#

**Chart 1B.** Chart for determining anchor bolt load of Free Standing Tool Solutions Jib.

**Note:** Loads are based on a 15% hoist weight allowance and a 25% impact factor allowance.

## STEP 2 - BOOM ASSEMBLY

- 2.1** Attach pivot shaft weldment (2) to the track (1) using two 5/16" clevis pins (8) and two 1/4 20 hex bolts (6), hex nuts (7) and washers (14).
- 2.2** Attach two brackets (3) to the track using two 1/4-20 hex bolts (6), hex nuts (7) and washers (14).
- 2.3** Assemble long (15) and short (13) tie rods by attaching left (5) and right (4) hand thread turnbuckle jaws at each end. Use 3/8 16 hex nut to secure the rod.
- 2.4** Attach one end of each tie rod to the bracket (3) and another to the pivot shaft weldment (2).

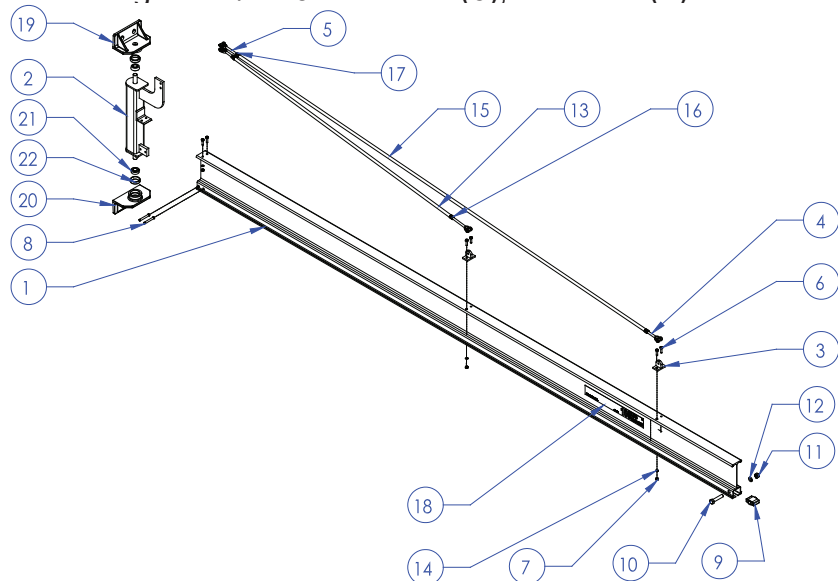

**Diagram 2A.**

## STEP 3 - TOOL SOLUTIONS JIB BOOM INSTALLATION (WALL/COLUMN MOUNTED)

### STOP!


Do not proceed if your support structure does not meet the loading requirements determined in Step 1.5.

### WARNING

Consult a qualified structural engineer if you deviate from the recommended dimensions provided in this manual. Gorbel, Inc. is not responsible for any deviation from these foundation recommendations.


**Step 3 pertains to the wall or column mounted jib only. For freestanding jibs, proceed to step 4.**

- 3.1** Determine position of **upper** and **lower** pivot mounting assemblies on support structure.

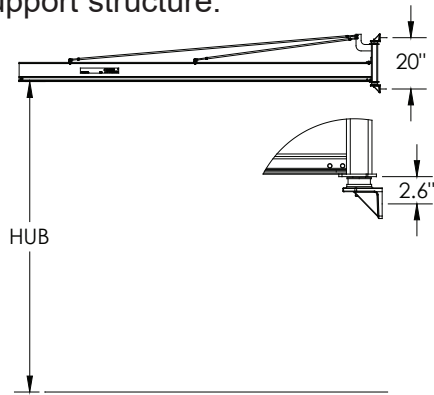


*Jib positioning.*

- 3.2** Drill bolt holes and bolt **lower** pivot mounting assembly to support structure.

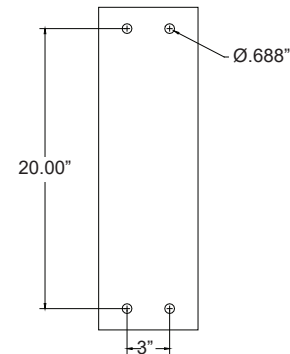


*Mounting holes.*

- 3.3** Lift boom weldment up and insert lower pivot pin into lower pivot mounting assembly.

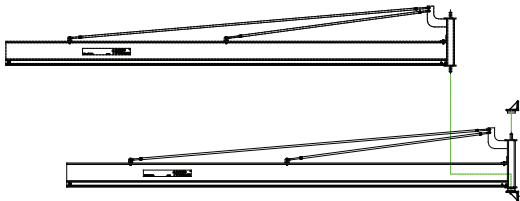

*Installing boom weldment.*

- 3.4** Place upper pivot mounting assembly on upper pivot pin of boom weldment and slide it all the way down. Bolt upper pivot mounting assembly to support structure.

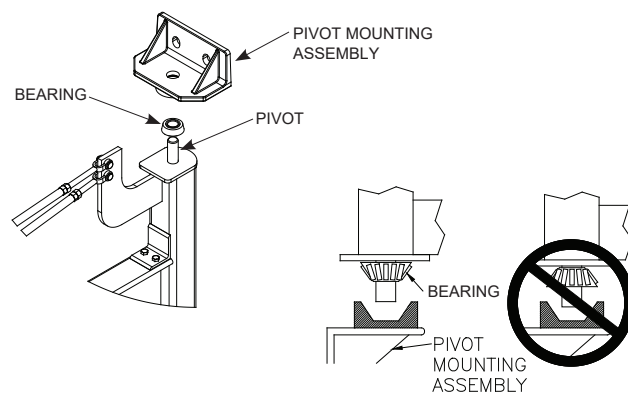

*Installing upper pivot mounting assembly.*

- 3.5** Check that pivot shaft of crane is plumb.
- 3.6** Once shaft is plumb and shimmed, tighten all mounting bolts to manufacturer's specification.
- 3.7** Carefully swing boom through entire travel to ensure boom is clear of obstructions and does not drift.

## STEP 4 - FREE STANDING TOOL SOLUTIONS JIB MAST INSTALLATION




### STOP!

Do not proceed if your support structure does not meet the loading requirements determined in **Step 1.5**.

#### 4.1 INSTALLING ANCHOR BOLTS

##### A) Site Requirements:

- A minimum 6" thick reinforced concrete floor is required (see **diagram 4B**).
- Foundation requirements are based on soil pressure of 2500# per square foot. Concrete pressure recommended for jib crane foundation is 3000# per square inch of compressive force, with no cracks or seams in a 48" square area around center of mast.
- Chemical (epoxy) anchor bolts are recommended because of their ability to withstand the vibrating loads caused by the rapid raising or lowering of the load.
- Anchor bolts (by others) for base plates must:
  - be 3/4" in diameter.
  - be embedded at least 4" into floor, not to exceed 3/4 of floor depth (see **diagram 4A**).
  - have **minimum** of two threads above nut after installation

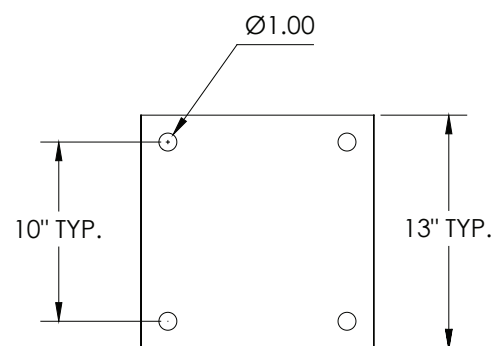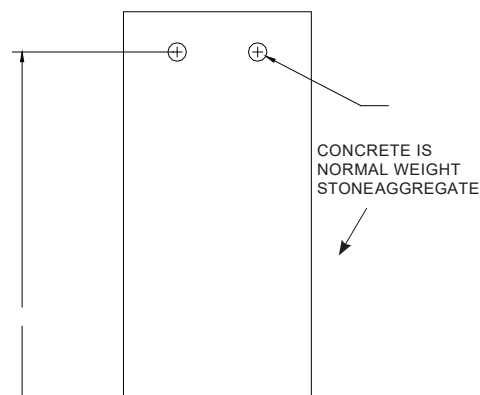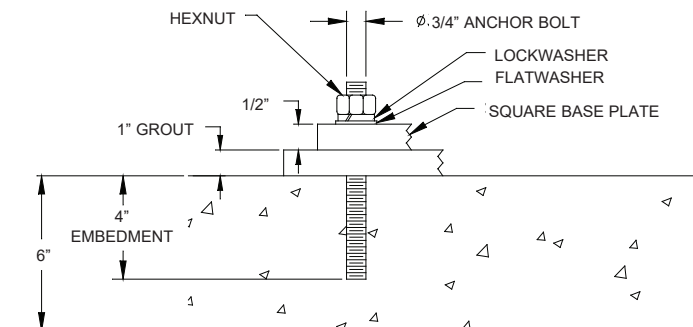

- B) Drill holes in concrete floor using pre-drilled holes in base plate or diagram 4C as a guide (use drill bit size recommended by anchor bolt manufacturer).
- C) Install anchor bolts (Grade 5 or better) and hardware (by others) according to manufacturer's installation directions and requirements.


## STEP 4 - FREE STANDING TOOL SOLUTIONS JIB MAST INSTALL (CONT.)

### 4.2 INSTALLING AND PLUMBING MAST

- A) Mast must be plumb to prevent boom from drifting.
- B) Cover entire base plate area with one inch of non-shrink precision grout.
- C) Set mast into place and make sure that the base plate is completely seated in the grout.
- D) Plumb mast using level on two faces (***shown at right***).
- E) Once mast is plumb and grout has cured, fully tighten anchor bolt hardware.

**Note:** If Gorbel is the supplier of the anchor bolts, tighten to full compression of the lock washer.

- F) Verify mast is still plumb.

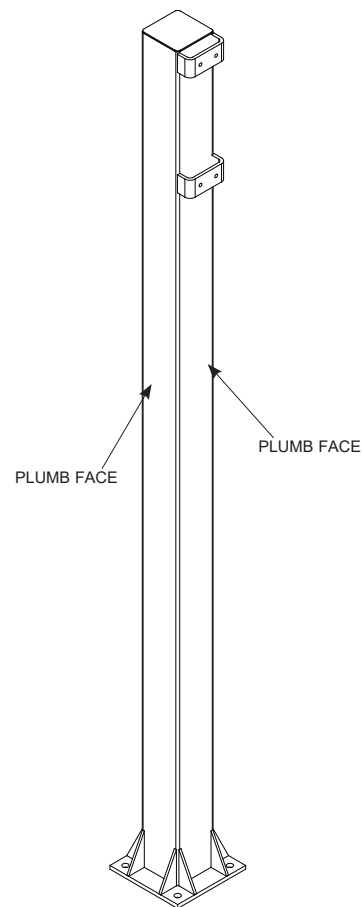


TORQUE CHART	
Bolt Diameter	Torque
1/2"	50 ft.-lb.
5/8"	95 ft.-lb.
3/4"	150 ft.-lb.


## STEP 5 - TOOL SOLUTIONS JIB BOOM INSTALLATION (FREE STANDING)

Step 5 pertains to the freestanding jib only. For wall or column mounted jibs, go back to step 3.


- 5.1** Bolt **lower** pivot mounting assembly to mast weldment.

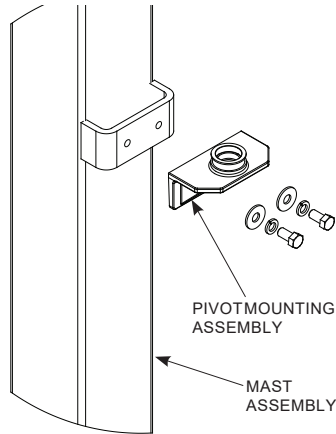


- 5.2** Place and orient pivot bearing on boom **lower** pivot pin.

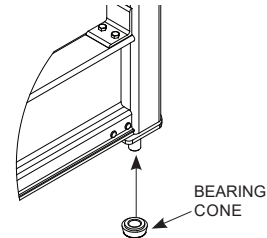

- 5.3** Lift boom weldment up and insert **lower** pivot pin into **lower** pivot mounting assembly.

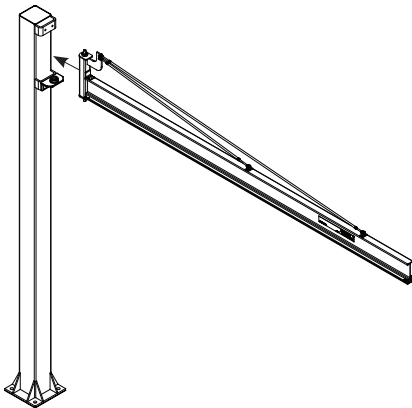

- 5.4** Place **upper** pivot mounting assembly on **upper** pivot pin of boom weldment. Bolt **upper** pivot mounting assembly to mast weldment.

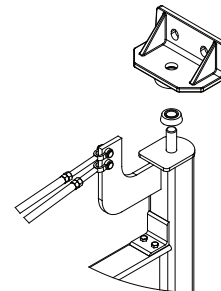

- 5.5** Check that pivot pins of crane are plumb.
- 5.6** Once pins are plumb and shimmed, tighten all mounting bolts to manufacturer's specification.
- 5.7** Carefully swing boom through entire travel to ensure boom is clear of obstructions and does not drift.

## STEP 6 - FINAL STEPS

- 6.1** Do not throw away this manual: maintenance schedule is on back cover.
- 6.2** Check to make sure all bolts are tight and lock washers are compressed.
- 6.3** If necessary, touch up crane with paint provided.
- 6.4** Keep Packing List, Installation Manual, General Arrangement Drawing, and any other inserts filed together in a safe place.

# CRANE OPERATOR INSTRUCTIONS

Overhead cranes and jib cranes generally handle materials over working areas where there are personnel. Therefore, it is important for the crane operator to be instructed in the use of the crane and to understand the severe consequences of careless operation. It is not intended that these suggestions take precedence over existing plant safety rules and regulations or OSHA regulations. However, a thorough study of the following information should provide a better understanding of safe operation and afford a greater margin of safety for people and machinery on the plant floor. It must be recognized that these are suggestions for the crane operator's use. It is the responsibility of the owner to make personnel aware of all federal, state and local rules and codes, and to make certain operators are properly trained.

## Qualifications

Crane operation, to be safe and efficient, requires skill: the exercise of extreme care and good judgment, alertness and concentration, and rigid adherence to proven safety rules and practices as outlined in applicable and current ANSI and OSHA safety standards. In general practice, no person should be permitted to operate a crane:

- Who cannot speak the appropriate language or read and understand the printed instructions.
- Who is not of legal age to operate this type of equipment.
- Whose hearing or eyesight is impaired (unless suitably corrected with good depth perception).
- Who may be suffering from heart or other ailments which might interfere with the operator's safe performance.
- Unless the operator has carefully read and studied this operation manual.
- Unless the operator has been properly instructed.
- Unless the operator has demonstrated his instructions through practical operation.
- Unless the operator is familiar with hitching equipment and safe hitching equipment practices.

## Inspection

Test the crane movement and any attachments on the crane at the beginning of each shift. Whenever the operator finds anything wrong or apparently wrong, the problem should be reported immediately to the proper supervisor and appropriate corrective action taken.

## Operating Suggestions

One measure of a good crane operator is the smoothness of the crane operation. The good crane operator should know and follow these proven suggestions for safe, efficient crane handling.

1. In case of emergency or during inspection, repairing, cleaning or lubrication, a warning sign or signal should be displayed and the main switch should be locked in the "off" position. This should be done whether the work is being done by the crane operator or by others.
2. Contact with rotation stops or trolley end stops shall be made with extreme caution. The operator should do so with particular care for the safety of persons below the crane, and only after making certain that any persons on the other cranes are aware of what is being done.
3. ANY SAFETY FEATURES AND MECHANISMS BUILT-IN OR OTHERWISE PROVIDED WITH THE CRANE BY GORBEL ARE REQUIRED FOR THE SAFE OPERATION OF THE CRANE. DO NOT, UNDER ANY CIRCUMSTANCES, REMOVE OR OTHERWISE IMPAIR OR DISABLE THE PROPER FUNCTIONING OF ANY CRANE SAFETY MECHANISMS OR FEATURES BUILT-IN OR OTHERWISE PROVIDED BY GORBEL FOR SAFE OPERATION OF THE CRANE. ANY REMOVAL, IMPAIRMENT OR DISABLING OF ANY SUCH SAFETY MECHANISMS OR FEATURES OR OTHER USE OR OPERATION OF THE CRANE WITHOUT THE COMPLETE AND PROPER FUNCTIONING OF ANY SUCH SAFETY MECHANISMS OR FEATURES AUTOMATICALLY AND IMMEDIATELY VOIDS ANY AND ALL EXPRESS AND IMPLIED WARRANTIES OF ANY KIND OR NATURE.

## General

There is no one single factor that is more important for minimizing the possibility of personal injury to the operator and those working in the area, or damage to property, equipment, or material than being familiar with the equipment and using Safe Operating Practices.

Jibs are designed for lifting and transporting of material only. Under no circumstances, either during initial installation or in any other use, should the jib be used for lifting or transporting personnel.

No operator should be permitted to use the equipment that is not familiar with its operation, is not physically or mentally fit, or has not been schooled in safe operating practices. The misuse of jibs can lead to certain hazards which cannot be protected against by mechanical means; hazards which can only be avoided by the exercise of intelligence, care, and common sense.

Safe Operating Practices also involve a program of periodic inspection and preventative maintenance (covered in a separate section). Part of the operator's training should be an awareness of potential malfunctions/hazards requiring adjustments or repairs, and bringing these to the attention of supervision for corrective action.

Supervision and management also have an important role to play in any safety program by ensuring that a maintenance schedule is adhered to, and that the equipment provided for the operators is suitable for the job intended without violation of one or more of the rules covering safe operating practices and good common sense.

The Safe Operating Practices shown are taken in part from the following publications:

- American National Standard Institute (ANSI)
- Safety Standards for Cranes, Derricks, Hoists
- ANSI B30.2 - Overhead and Gantry Cranes
- ANSI B30.16 - Overhead Hoists

## LIMITED WARRANTY

It is agreed that the equipment purchased hereunder is subject to the following LIMITED warranty and no other. Gorbelt Incorporated ("Gorbelt") warrants the manual push-pull Work Station Cranes, Jib Crane, and Gantry Crane products to be free from defects in material or workmanship for a period of ten years or 20,000 hours use from date of shipment. Gorbelt warrants the Motorized Work Station Cranes and Jib Crane products to be free from defects in material or workmanship for a period of two years or 4,000 hours use from the date of shipment. Gorbelt warrants the G-Force® and Easy Arm™ products to be free from defects in material or workmanship for a period of one year or 2,000 hours use from the date of shipment. This warranty does not cover Gantry Crane wheels. This warranty shall not cover failure or defective operation caused by operation in excess of recommended capacities, misuses, negligence or accident, and alteration or repair not authorized by Gorbelt. No system shall be field modified after manufacture without the written authorization of Gorbelt, Inc. Any field modification made to the system without the written authorization of Gorbelt, Inc. shall void Gorbelt's warranty obligation. OTHER THAN AS SET FORTH HEREIN, NO OTHER EXPRESS WARRANTIES, AND NO IMPLIED WARRANTIES, ORAL OR WRITTEN, INCLUDING BUT NOT LIMITED TO THE WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, ARE MADE BY GORBEL WITH RESPECT TO ITS PRODUCTS AND ALL SUCH WARRANTIES ARE HEREBY SPECIFICALLY DISCLAIMED. GORBEL SHALL NOT BE LIABLE UNDER ANY CIRCUMSTANCES FOR ANY INCIDENTAL, SPECIAL AND/OR CONSEQUENTIAL DAMAGES WHATSOEVER, WHETHER OR NOT FORESEEABLE, INCLUDING BUT NOT LIMITED TO DAMAGES FOR LOST PROFITS AND ALL SUCH INCIDENTAL, SPECIAL AND/OR CONSEQUENTIAL DAMAGES ARE HEREBY ALSO SPECIFICALLY DISCLAIMED. Gorbelt's obligation and Purchaser's or end user's sole remedy under this warranty is limited to the replacement or repair of Gorbelt's products at the factory, or at the discretion of Gorbelt, at a location designated by Gorbelt. Purchaser or end user shall be solely responsible for all freight and transportation costs incurred in connection with any warranty work provided by Gorbelt hereunder. Gorbelt will not be liable for any loss, injury or damage to persons or property, nor for damages of any kind resulting from failure or defective operation of any materials or equipment furnished hereunder. Components and accessories not manufactured by Gorbelt are not included in this warranty. Purchaser's or end user's remedy for components and accessories not manufactured by Gorbelt is limited to and determined by the terms and conditions of the warranty provided by the respective manufacturers of such components and accessories.

**A) DISCLAIMER OF IMPLIED WARRANTY OF MERCHANTABILITY**

Gorbelt and Purchaser agree that the implied warranty of merchantability is excluded from this transaction and shall not apply to the goods involved in this transaction.

**B) DISCLAIMER OF IMPLIED WARRANTY OF FITNESS FOR PARTICULAR PURPOSE**

Gorbelt and Purchaser agree that the implied warranty of fitness for particular purpose is excluded from this transaction and shall not apply to the goods involved in this transaction.

**C) DISCLAIMER OF EXPRESS WARRANTY**

Gorbelt's agents, or dealer's agents, or distributor's agents may have made oral statements about the machinery and equipment described in this transaction. Such statements do not constitute warranties, and Purchaser agrees not to rely on such statements. Purchaser also agrees that such statements are not part of this transaction.

**D) DISCLAIMER OF SPECIAL, INCIDENTAL AND CONSEQUENTIAL DAMAGES**

Gorbelt and Purchaser agree that any claim made by Purchaser which is inconsistent with Gorbelt's obligations and the warranty remedies provided with Gorbelt's products, and in particular, special, incidental and consequential damages, are expressly excluded.

**E) DEALER OR DISTRIBUTOR NOT AN AGENT**

Gorbelt and Purchaser agree that Purchaser has been put on notice that dealer or distributor is not Gorbelt's agent in any respect for any reason. Gorbelt and Purchaser also agree that Purchaser has been put on notice that dealer or distributor is not authorized to incur any obligations or to make any representations or warranties on Gorbelt's behalf other than those specifically set forth in Gorbelt's warranty provided in connection with its product.

**F) MERGER**

This warranty agreement constitutes a final and complete written expression of all the terms and conditions of this warranty and is a complete and exclusive statement of those terms.

**G) PAINTING**

Every crane (excluding components) receives a quality paint job before leaving the factory. Unfortunately, no paint will protect against the abuses received during the transportation process via common carrier. We have included at least one (1) twelve ounce spray can for touchup with each crane ordered (unless special paint was specified). If additional paint is required, contact a Gorbelt® Customer Service Representative at 1-800-821-0086 or 1-585-924-6262.

**Title and Ownership:**

Title to the machinery and equipment described in the foregoing proposal shall remain with Gorbelt and shall not pass to the Purchaser until the full amount herein agreed to be paid has been fully paid in cash.

**Claims and Damages:**

Unless expressly stated in writing, goods and equipment shall be at Purchaser's risk on and after Seller's delivery in good shipping order to the Carrier. Gorbelt shall in no event be held responsible for materials furnished or work performed by any person other than it or its authorized representative or agent.

**Cancellations:**

If it becomes necessary for the purchaser to cancel this order wholly or in part, he shall at once so advise Gorbelt in writing. Upon receipt of such written notice all work will stop immediately. If the order entails only stock items, a flat restocking charge of 15% of the purchase price will become due and payable by Purchaser to Gorbelt. Items purchased specifically for the canceled order shall be charged for in accordance with the cancellation charges of our supplier plus 15% for handling in our factory. The cost of material and/or labor expended in general fabrication for the order shall be charged for on the basis of total costs to Gorbelt up to the time of cancellation plus 15%.

**Returns:**

No equipment, materials or parts may be returned to Gorbelt without express permission in writing to do so.

Extra Charge Delay: If Purchaser delays or interrupts progress of Seller's performance, or causes changes to be made, Purchaser agrees to reimburse Gorbelt for expense, if any, incident to such delay.

**Changes and Alterations:**

Gorbelt reserves the right to make changes in the details of construction of the equipment, as in its judgment, will be in the interest of the Purchaser; will make any changes in or additions to the equipment which may be agreed upon in writing by the Purchaser; and Gorbelt is not obligated to make such changes in products previously sold any customer.

**Third Party Action:**

Should Gorbelt have to resort to third party action to collect any amount due after thirty (30) days from date of invoice, the Purchaser agrees to pay collection costs, reasonable attorney's fees, court costs and legal interest.

**OSHA Responsibilities:**

Gorbelt agrees to fully cooperate with Purchaser in the design, manufacture or procurement of safety features or devices that comply with OSHA regulations. In the event additional equipment or labor shall be furnished by Gorbelt, it will be at prices and standard rates then in effect, or as may be mutually agreed upon at the time of the additional installation.


**Equal Employment Opportunity:**

Gorbelt agrees to take affirmative action to ensure equal employment opportunity for all job applicants and employees without regard to race, color, age, religion, sex, national origin, handicap, veteran, or marital status. Gorbelt agrees to maintain non-segregated work facilities and comply with rules and regulations of the Secretary of Labor or as otherwise provided by law or Executive Order.

# INSPECTION AND MAINTENANCE SCHEDULE

GORBEL® TOOL SOLUTIONS JIB INSPECTION AND MAINTENANCE SCHEDULE			
ITEM	COMPONENT	MAINTENANCE	FREQUENCY*
1	Mounting Bolts and Anchor Bolts	Check that lock washers are compressed and nuts tightened to manufacturer's specifications.	Every 500 hours or 3 months
2	Pivot Pins	Check that cotter pin is properly installed so that boom cannot dislodge.	Every 2000 hours or yearly
3	Accessory Items	Conduct a general inspection of all accessory items.	Every 1000 hours or 6 months
4	Gorbel® Crane	Conduct a visual inspection of the crane overall.	Every 1000 hours or 6 months

\*Federal, state and local codes may require inspection and maintenance checks more often. Please check the federal, state and local code manuals in your area.

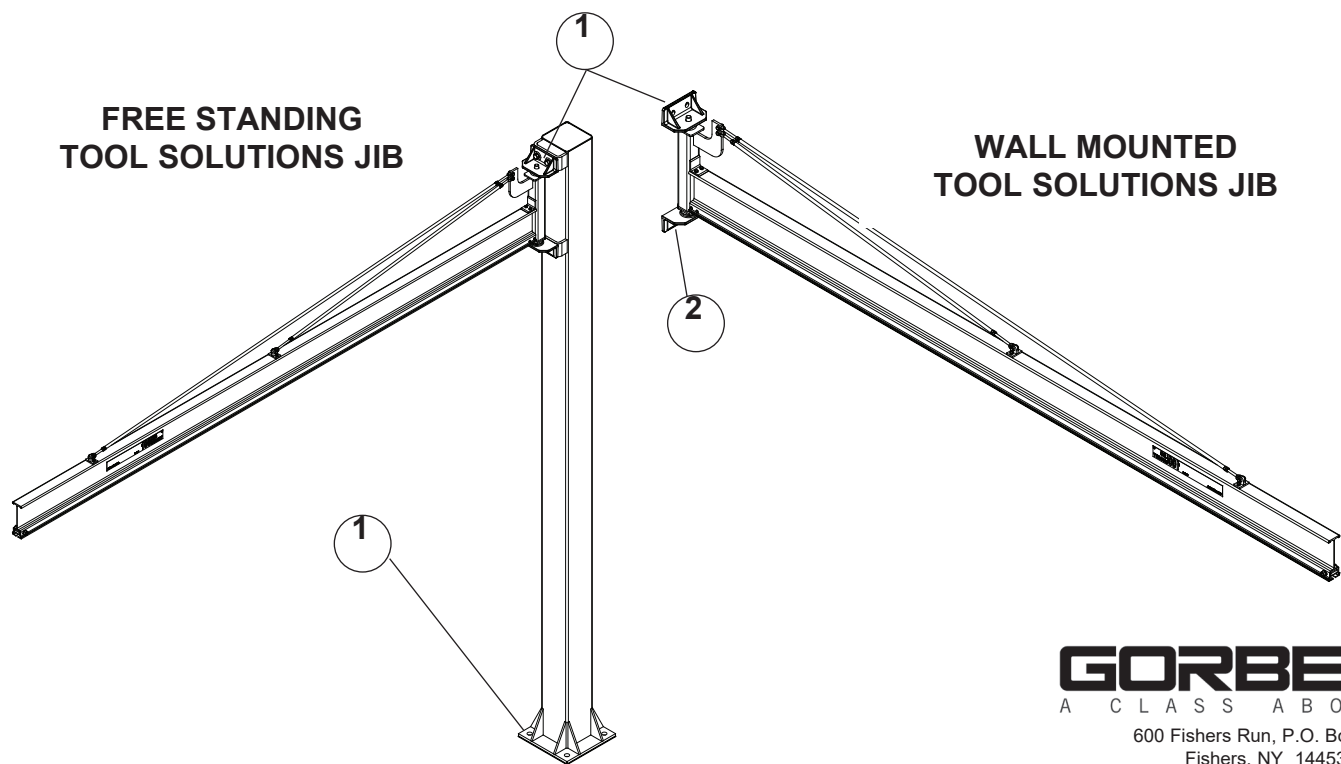

**⚠ WARNING**

This product contains chemicals known to the State of California to cause cancer and birth defects or other reproductive harm.  
For more information: [www.P65Warnings.ca.gov](http://www.P65Warnings.ca.gov)

**GORBEL®**  
A CLASS ABOVE

600 Fishers Run, P.O. Box 593  
Fishers, NY 14453-0593  
Phone: (800) 821-0086  
Fax: (800) 828-1808  
E-Mail: [info@gorbel.com](mailto:info@gorbel.com)  
<http://www.gorbel.com>

© 2025 Gorbel Inc.  
All Rights Reserved

  
[linkedin.com/company/gorbel](https://www.linkedin.com/company/gorbel)

  
[Facebook.com/gorbelinc](https://www.facebook.com/gorbelinc)

  
[youtube.com/gorbelmarketing](https://www.youtube.com/gorbelmarketing)

  
[instagram.com/gorbelinc](https://www.instagram.com/gorbelinc)

  
[gorbel.com/blog](https://www.gorbel.com/blog)